

THOMSON

LED DISPLAY TOWER FAN

THVEL491TT

INSTRUCTION MANUAL

IMPORTANT :

Carefully read this instruction manual before switching on and keep it safe.



WARNING!!!

If the power cord is damaged, it must be replaced by the manufacturer, its service or similarly qualified persons in order to avoid a hazard.

The plug socket power cable must be removed before cleaning the unit or undertake maintenance operations.

WARNINGS

The product must be installed in accordance with the national wiring rules. This unit is intended for household and domestic use.

1. Before connecting the appliance, check that:
 - The supply voltage is the same as the nameplate,
 - The power supply socket is suitable to the device,
 - The cable plug is adapted to the socketThe product is intended only for a socket with a main voltage of 230 volts (50 Hz).

2. Never insert fingers, pencils or other objects through the grid when the appliance is running.
3. Make sure the appliance is placed on a stable surface when in use.
4. Do not use your appliance near a window. The rain could cause an electrical shock.
5. Never leave the appliance running unattended.
6. For security reasons, you **MUST** always remove the plug from the outlet when not in use, before cleaning or before maintenance.
7. Do not use chemicals or detergents for cleaning, it could easily damage or deform your appliance.
8. Do not pull the cord to unplug from the socket.
9. Do not use the unit with a damaged cord or plug.
10. Never attempt to disassemble or repair the device yourself. In the case of repairs by someone not competent, the warranty is void.

11. The unit and the grid should not be removed for maintenance or cleaning.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
14. This product complies with the requirements of Directives 2014/35/EU (repealing Directive 73/23/EEC amended by Directive 93/68/EEC) and 2014/30/EU (repealing Directive 89/336/EEC) .
15. Unplug the product when you move it.
16. Never run the product in the presence or within reach of unsupervised children.
17. The battery must be removed from the appliance before it is scrapped;
18. The battery is to be disposed of safely.



19. The batteries in the remote control should not be exposed to excessive heat such as sunshine or fire.
20. Well assemble the product before use.
21. This appliance is intended to be used in household.
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
23. Regarding the correct assembly of the device, refer to page 6 of the corresponding instructions.
24. For cleaning and maintenance instruction, refer to page 8 of the corresponding section
25. User instructions should be provided with the device so that it can be used safely.

TECHNICAL SPECIFICATIONS :


Model n°	THVEL491TT
Power supply	220-240V~50Hz
Power	60W
Classe	II
Remote control battery	CR2025, 3V

ASSEMBLY INSTRUCTIONS


1. Unscrew the 3 screws under the base
2. Gently pull on the power cord. Pass the power cord through the hole in one of the two parts of the base planned for this purpose.
3. Adjust the two parts of the base by sliding and "clip" together, then adjust the base to the fan body. Insert the 3 screw in the base holes and well screw.
4. Finally, put the power cord into the path for this purpose under the base, to ensure the necessary stability to your fan.

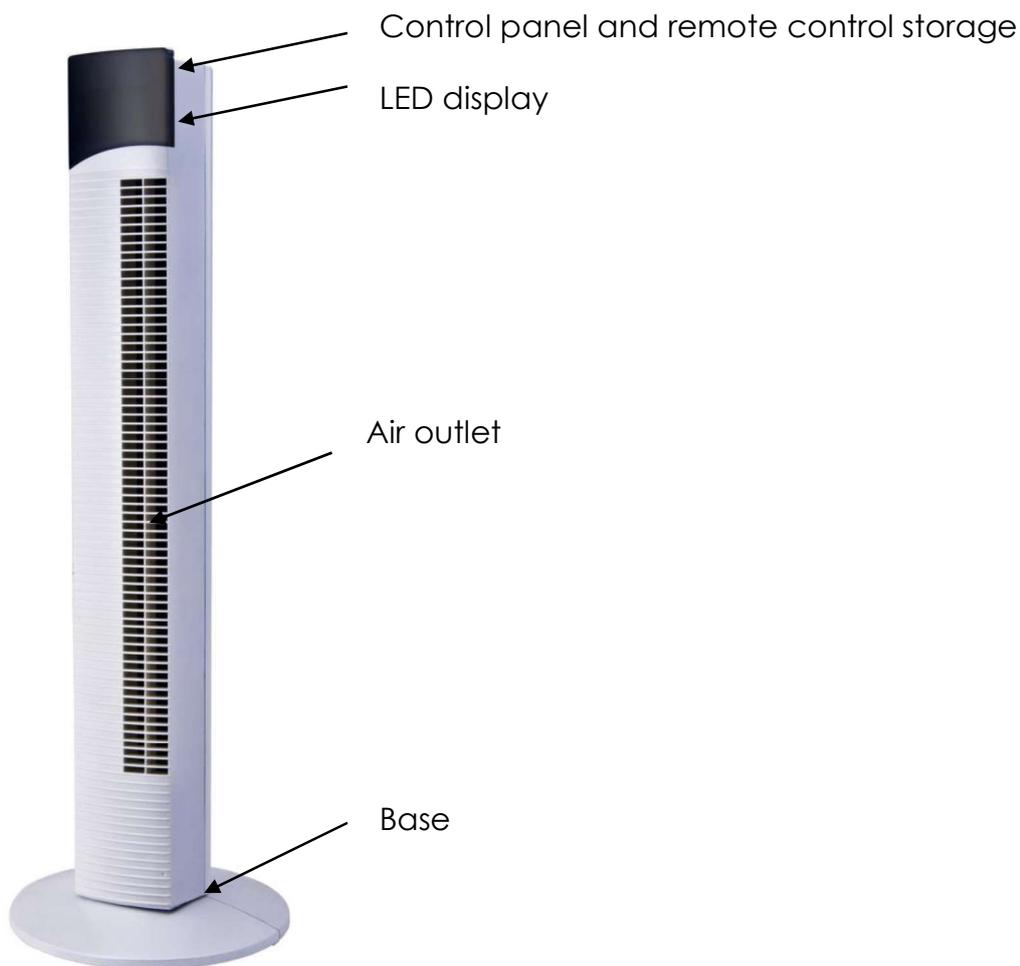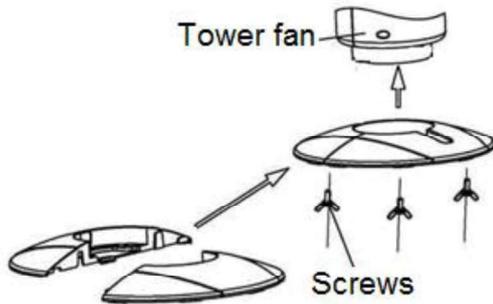

LED DISPLAY

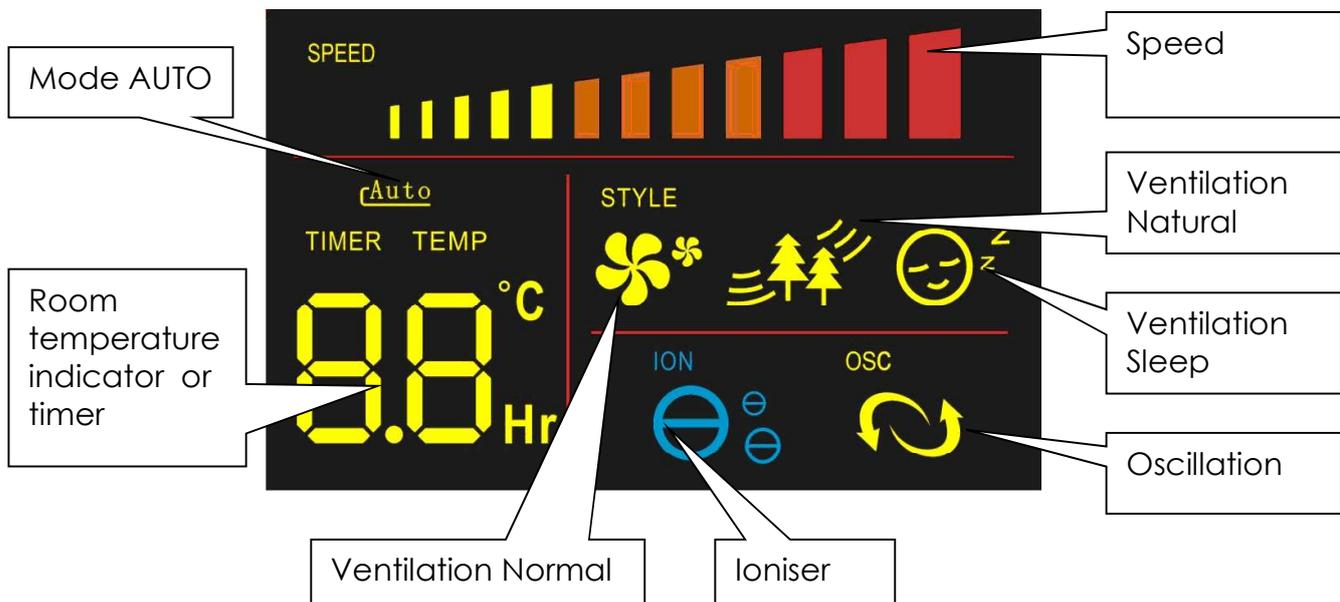

CONTROL PANEL

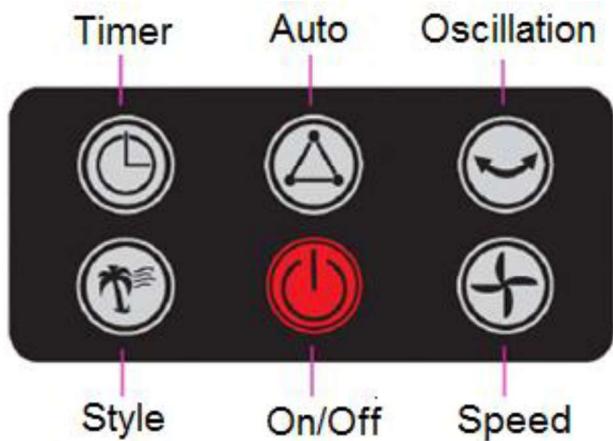

REMOTE CONTROL



OPERATING INSTRUCTIONS

1.  : On/Off
2.  : Timer (Up to 8 hours)

3.  : Mode Auto : . If the ambient temperature is equal to or higher than 25 °C, the fan will run, it stops if the temperature is below 25 °C

4.  : Oscillation.

5.  : Allows you to select three different ventilation:
-Normal: conventional operating continuously at the selected speed (Low / Medium / High)
-Natural: intermittent operation
-Sleep: intermittent operation, ideal overnight

6.  : Selection of 3 different speeds: Low / Medium / High

7.  : Enable or disable the ionizer


8. Remote control: Requires 1pc CR2025 3V battery supplied in the remote control. Used batteries must be safely disposed. Place them in collection bins provided (please ask your dealer) to protect the environment.

Respect the polarity when inserting

BATTERY REPLACEMENT

1. Remove the battery holder by pressing the locking tab A with your thumb and pulling it out as per arrow B.
2. Replace the battery with the same type and the (+) side facing up.
3. Gently push in the holder until securely locked into place.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

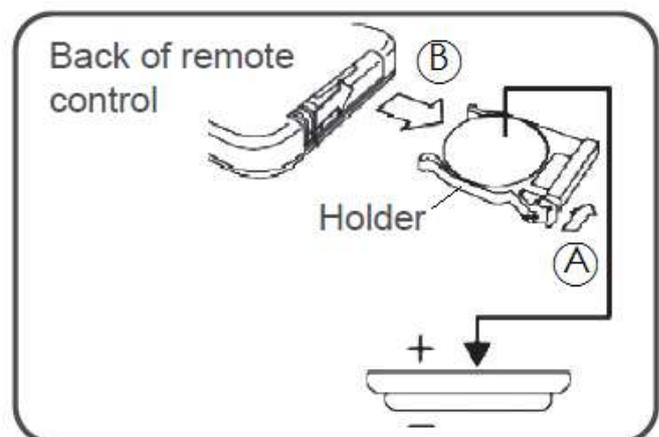

CLEANING AND MAINTENANCE

1. Always disconnect the appliance from the mains by switching it off and removing the plug from the power outlet before cleaning.
2. It is advisable to use a neutral detergent and a soft cloth and to rub dry. Do not use solvents, acidic detergents, petrol or alcohol etc. to clean the plastic components, as these could be deformed or damaged.
3. Do not allow water to penetrate the motor during cleaning.

THVEL491TT

Description	Symbol	Value	Unit
Maximum fan flow rate	F	8,41	m ³ /min
Fan power input	P	40,50	W
Service value	SV	0,21	(m ³ /min)/W
Standby power consumption	P _{SB}	0,25	W
Off mode power consumption	P _{off}	-	W
Fan sound power level	L _{WA}	58,94	dB(A)
Maximum air velocity	c	4,67	meters/sec
Seasonal electricity consumption	Q	13,24	kWh/a
Measurement standard for service value	EN 60704-2-7: 1998, EN 60704-1: 2010+A11: 2012 EN 50564: 2011 EN ISO 5801: 2008		
Contact details for obtaining more information	SCHNEIDER CONSUMER GROUP, 12 rue Jules Ferry, 93110 Rosny sous bois, France		



The European directive 2012/19/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

The warranty does not cover the wear parts of the product, nor the problems or damage resulting from:

- (1) surface deterioration due to normal wear and tear of the product;
- (2) defects or deterioration due to contact with liquids and corrosion caused by rust or the presence of insects;
- (3) any incident, abuse, misuse, alteration, disassembly or Unauthorized repair;
- (4) improper maintenance, improper use concerning the product or connection to an incorrect voltage;
- (5) any use of accessories not supplied or not approved by the manufacturer.

The guarantee will be cancelled if the nameplate and / or serial number of the product are removed.

Imported by SCHNEIDER CONSUMER GROUP,
12 Rue Jules Ferry, 93110 Rosny sous Bois, France
THOMSON is a trademark of Technicolor SA used under license by
SCHNEIDER CONSUMER GROUP.